

Errores comunes en impresoras OKI

| CODIGO DE ERROR | PANTALLA LCD | CAUSA |
|--------------------------|---|---|
| 610 611 612 613 | INSTALL TONER [Instale tóner] <nnn>:<a> TONER MISSING [Falta cartucho] | <i>Un cartucho de tóner no está instalado: 610:Y = Yellow [amarillo]; 611:M = Magenta; 612:C = Cyan [cian]; 613:K = Black [negro]</i> |
| 614 615 616 617 | REPLACE TONER [Cambiar tóner] <nnn>: INCOMPATIBLE <a> TONER [Cartucho de tóner incompatible] | <i>Falta de coincidencia de canal OEM: cartucho de tóner incompatible: 614:Y = Yellow [amarillo]; 615:M = Magenta; 616:C = Cyan [cian]; 617:K = Black [negro]</i> |
| 620 621 622 623 | REPLACE TONER [Cambiar tóner] <nnn>: INCOMPATIBLE <a> TONER [Cartucho de tóner incompatible] | <i>Falta de coincidencia de canal OEM: cartucho de tóner incompatible: 614:Y = Yellow [amarillo]; 615:M = Magenta; 616:C = Cyan [cian]; 617:K = Black [negro]</i> |

SOS IMPRESORA



Errores comunes

OKI

#SOS 03



www.facebook.com/merkecartuchos.franquicia



twitter.com/Merkecartuchos_



www.merkecartuchos.com